


Cable Entry for TRU-Vu Waterproof Monitors



Open the blue rubber block. Remove inner black rubber cylinder(s) for the ports needed for your cable(s). Peel back the necessary amount of layers in each port to ensure a tight fit for each cable. They must fit snugly.

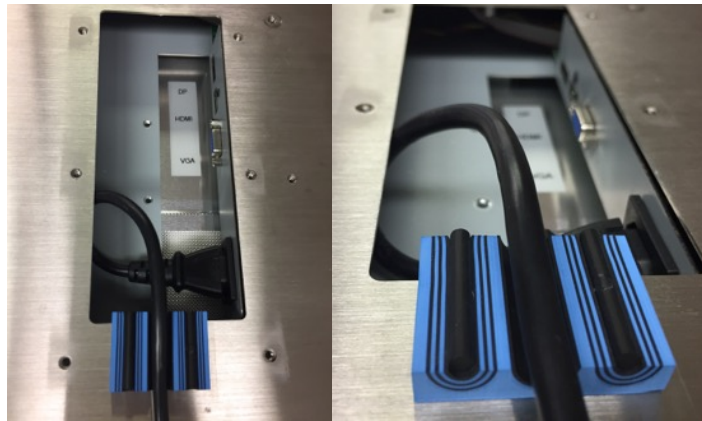

Remove the rear cover plate by removing all 7 screws. Plug in cable(s) and align cables through ports of rubber block. Be sure to keep black rubber cylinders in place for each unused port.



Replace top half of blue rubber block. Then replace rear cover plate as shown above. The blue rubber block should be slightly exposed as shown. Tighten all 7 screws. The blue rubber block should not be able to move.

Following these procedures will ensure that your TRU-Vu monitor maintains its water-tight integrity.